
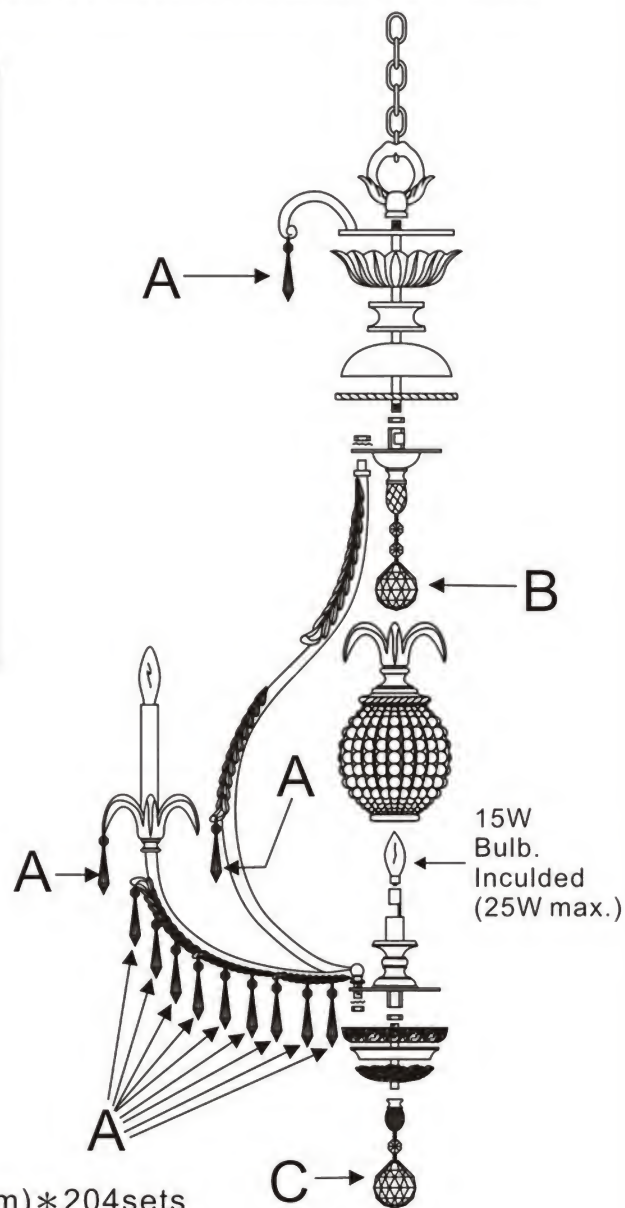
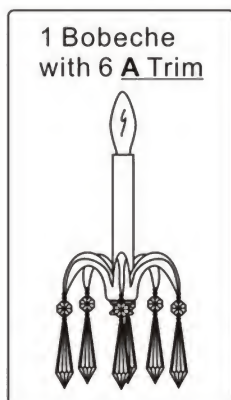


# MODEL#:32454 ASSEMBLY AND DRESSING INSTRUCTIONS

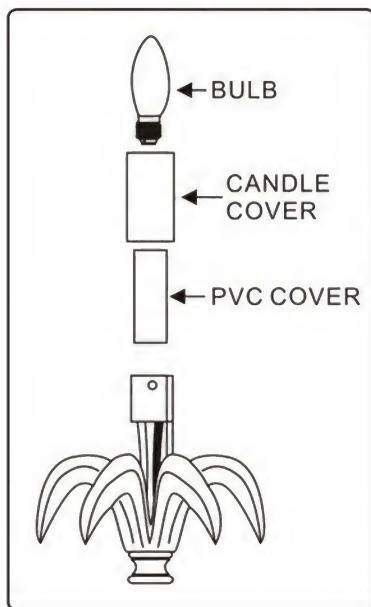


A= (14mm+38mm)\*204sets


B= (14mm x 2 + 40mm)\*1pc

C= (14mm + 40mm)\*1pc

# ITEM NUMBER:# 32454 INSTRUCTIONS

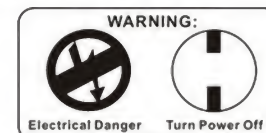

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

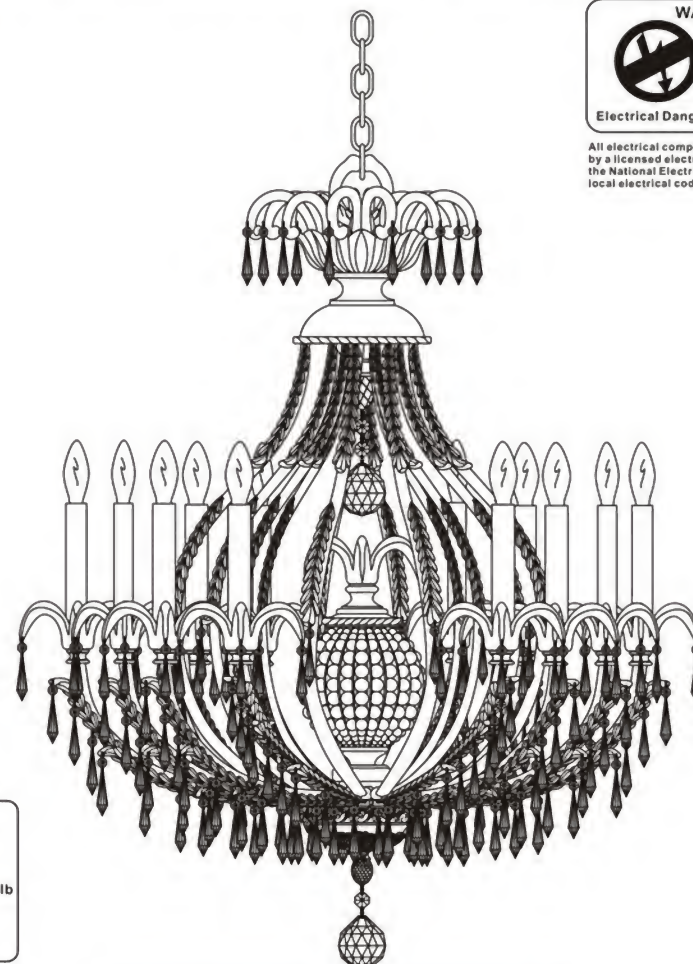

TI-32454 - 2008/4/9

